hipstreet

HS-193-4GB

CLIP MP3 PLAYER
LECTEUR MP3 PINCE

QUICK START GUIDE

www.hipstreet.com

193

SERIES / SÉRIE

Getting started

Thank you for your purchase of this Hipstreet® MP3 player. This manual is designed to help you easily set up and begin using your new device right away. Please read this manually carefully and be sure to retain it for future reference.

We hope this high quality product offers you endless hours of entertainment. Please visit our website at **www.hipstreet.com** for any questions or additional information you may need.

What's in the box:

- **A** 1 x HS-193-4GB
- **B** 1 x Earphones
- **C** 1 x Mini-USB charging cable

  1 x User Manual

A

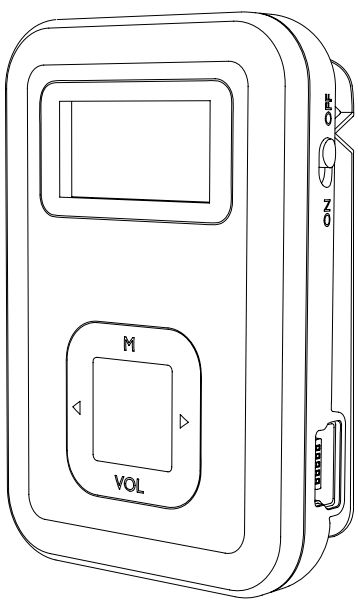

B

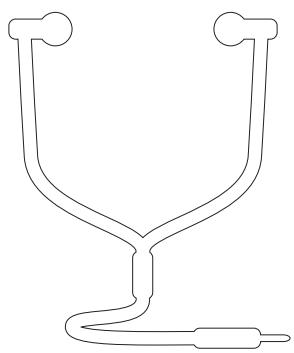

C

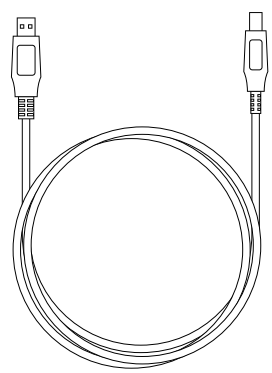

Getting started

Getting to Know Your MP3 Player: Easy-to-Use Controls

Button Functions:

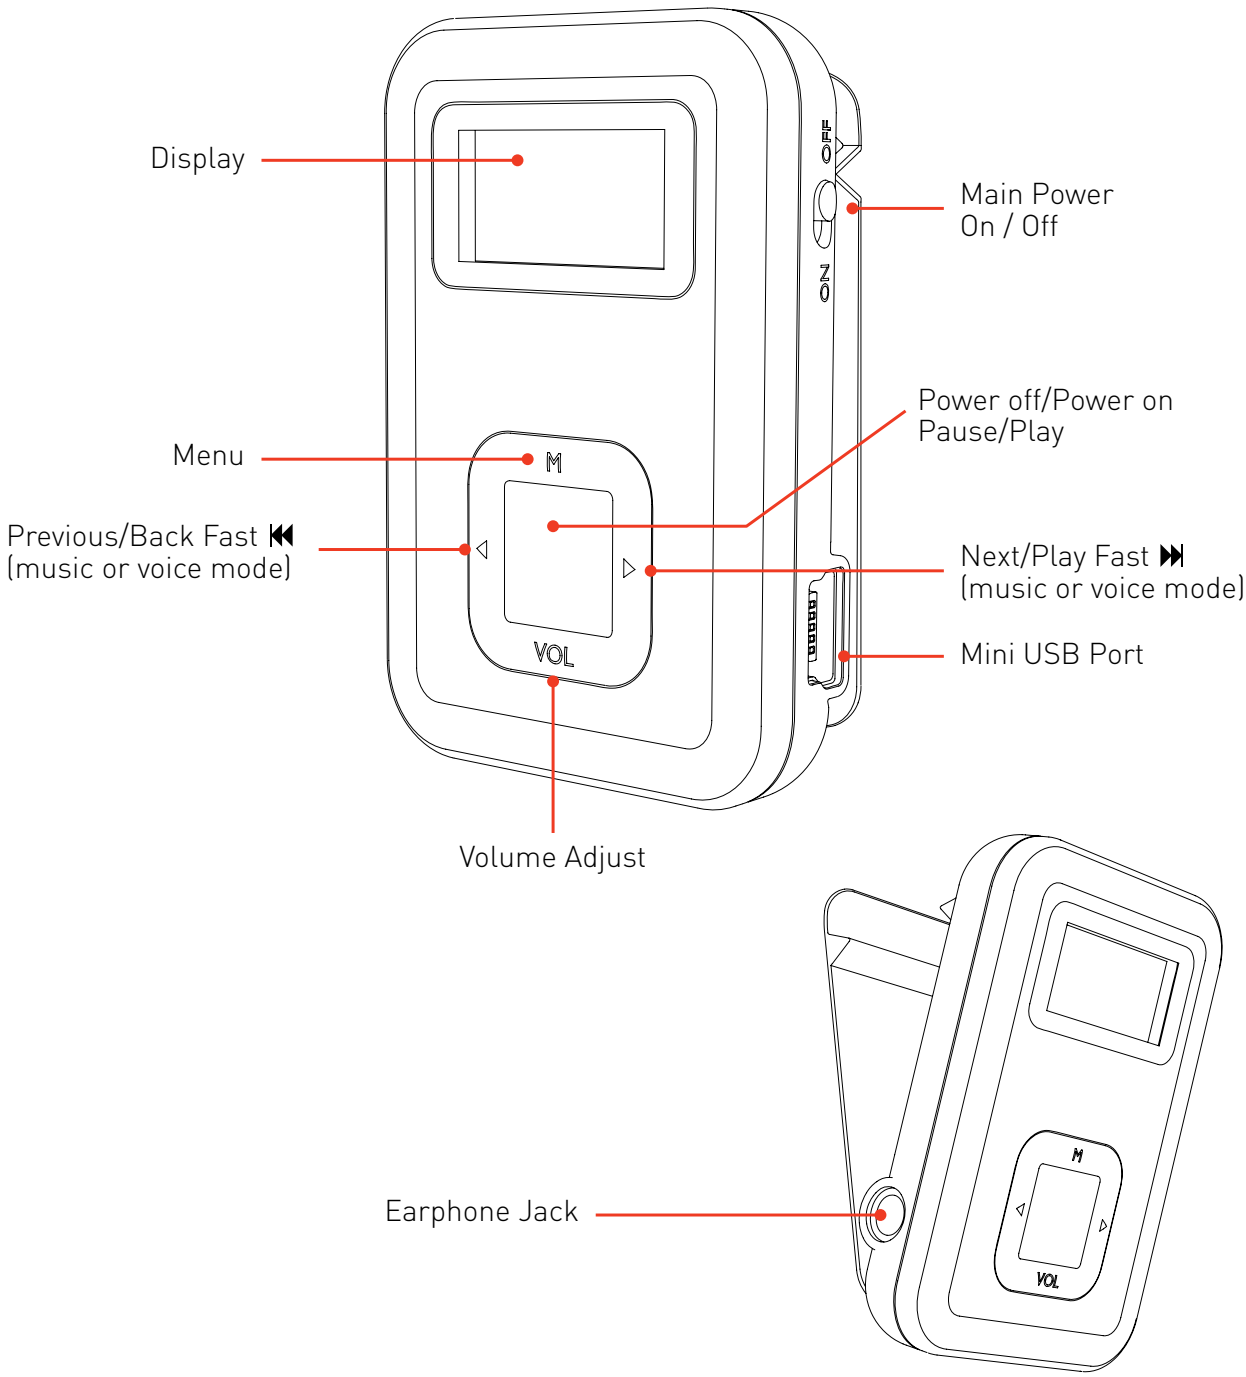

Getting started

Connecting with the Computer

System Requirements

Your computer system must meet the following specifications:

- Pentium III or Higher
- Microsoft Windows 2000/ME/XP/Vista/Win7/Win8.
- 120MB of available hard disk space
- USB port supported

Connecting the MP3 player to computer

Before connecting the player, make sure your computer is powered on.

1. Insert the USB cable provided into the player and computer.
2. For Windows, the computer system detects “New hardware” and starts to install the driver automatically. Wait for the system to finish the installation. When it has finished, a new “Removable Disk” will be created in “My Computer”.

Loading files to the MP3 player

To download the files from your computer, perform the following steps.

1. Open Windows Explorer or My computer. “Removable Disk” will be displayed.
2. Select the files on your computer and simply move it into the “Removable Disk” (drag-and-drop or copy-and-paste). After copying is completed, the data will be available on the MP3 player.

!

Note:

Do not disconnect the player during loading. It may cause malfunction of the player and the files.

Disconnecting the player

After completing the file transfer, safely disconnect the MP3 player.

1. Double click the green arrow “Safety Remove Hardware” in the taskbar on the bottom right of the window.
2. Select “USB Device” and click “Stop”.
3. When the “Stop a Hardware device” appears, click “OK” to disconnect the USB mass storage device. Then you can unplug the player safely.

Mass Storage

The MP3 player can be used to store any type of file as a USB flash drive. It can, be used to transfer files from one computer to another or as a back-up device.

Charging the battery

The battery of the player is charged automatically when the player is connected to the computer. Ensure the computer is turned on. The battery of the player is 80% charged in about one hour and fully charged in about two hours. If you charge the player while loading files to the player, it may take longer.

Basic Functions

Function Mode

There are 3 mode selections in this device. When the device is powered on, the main menu will be displayed, press the ⏮ & ⏭ keys to select the various modes.

Key operation and functions

PLAY key (⏯): Power on / Power off / Play / Pause
When power switch is on, press ⏯ key to turn player on
When power is on, press and hold ⏯ key to turn off
When music or voice files are playing, press ⏯ to pause, press ⏯ again to play.
When recording, short press ⏯ key to start recording; press ⏯ again to stop.

Note
This device has a sleep and power saving function. When the device is idle without pressing any keys/buttons, it will power off automatically.

MENU key (**M**): Function menu key (music or voice mode)
When this device is powered on, press **M** to enter submenu, press and hold to go back to main menu.
When MP3 files are being played: press **M** to enter EQ modes, press and hold **M** to go back to the main menu.
When music or voice files have been paused, press **M** to enter a submenu, press and hold to go back to main menu.

⏭ key: Next / Play fast (music or voice mode)
When in music mode: press ⏭ key to select next music or voice file.
When playing, press ⏭ key to play next music, press and hold ⏭ key to fast-forward.

⏮ key: Previous / Back fast (music or voice mode) Last (left key)
When in music mode: press ⏮ key to select previous music or voice file.
While playing, press ⏮ key to play previous music or voice file, press and hold ⏮ key to circulate through options.

USB port: Connect to PC through the USB port to transfer data files.

Music play

Playing your music

1. Connect the earphones to the device, with the main power button in the ON position.
2. Press and hold the ⏯ key to turn the device ON.
3. Select Music mode, press **M** to enter.
4. Short press the ⏯ key to play your music.
5. Press ⏯ key to pause, press the **M** key to select EQ function.
6. Select music files:

⏮ Key: select previous song. ⏭ key: select next song

7. Volume Control:

Press and hold VOL key till you see the volume bar and then press ⏮ key to decrease volume; press ⏭ key to increase volume.

Troubleshooting

If you have problems in operating your player, please check the points below before sending it to the service center.

Cannot power on

- The battery may be fully discharged. Please recharge the battery.

Files cannot be downloaded

- Check the connection between the player and PC.
- The memory capacity may be full.

No sound from the earphones

- Please adjust the volume and ensure the earphone jack is connected properly.
- Check if the format of the music file is supported by the player.

Need assistance? Please contact us!

For troubleshooting and support, please visit our website at www.hipstreet.com and check our Support section to view Frequently Asked Questions (FAQ's), video tutorials and more. If these resources do not quickly resolve the problem, please call or email us. Our Technical Support representatives are ready to help.

Phone: 1-888-456-2426
Monday to Friday: 8:30am – 5:00pm EST

Email: support@hipstreet.com

Web: www.hipstreet.com

We want you to start enjoying your product right away!

Device is pre-loaded with MediaMonkey

MediaMonkey will help you manage and play very large music collections, consisting of a variety music formats (MP3, WMA, AAC/M4A/M4P, OGG, APE, FLAC, MPC, VQF, WAV files) and/or audio CDs. MediaMonkey gives you a capable, yet nimble tool to organize, tag, create playlists, rename files, convert file formats, sync, level volume, and more.

For questions or support using MediaMonkey, please visit:
http://www.mediamonkey.com/support

FCC Warning

FCC/IC WARNING:
This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and the Canadian ICES-003. Operation is subject to the following conditions:
- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation

Important Safety and Usage Instructions

- Read Instructions: All the safety and operating instructions should be read before the product is used.
- Retain Instructions: The safety and operating instructions should be retained for future reference.
- Heed Warnings: All warnings on the product and in the instruction manual should be adhered to.
- Follow Instructions: All operating and usage instructions should be followed.
- Cleaning: Turn off the player before cleaning. Do not use chemical solvents, liquids, cleaners or abrasive materials to clean the product. Use a dry cloth for cleaning if needed.
- Extreme Temperatures: Avoid using this player in extreme heat or cold, and store away from heat sources, direct sunlight and humid or dusty conditions.
- Water and Moisture: Do not submerge this player in water and avoid spilling liquids of any kind on the product to prevent malfunction.
- Servicing: Do not attempt to service or disassemble the player yourself, as this may expose you to hazards and will void the warranty.
- Care: Avoid dropping player or placing on/near magnets to prevent damage.
- Disposal: Avoid disposing of player in extreme heat conditions to avoid explosion.
- Battery Life: Player battery life and length of use may vary under different usage conditions.
- File Back Up: Remember to back up files regularly. We will not be liable for the loss of data due to improper operation, repair or other causes.
- Safe Listening Levels: Be sure to limit earphone use to safe listening levels, particularly over a prolonged period of time to avoid hearing damage. Do not use earphones while driving an automobile or riding a bicycle to avoid accident.

hipstreet

North America: **1 888 456 2426**

UK: **0800 051 8330**

Netherlands: **0800 404 0006**

Germany: **0800 180 7686**